




TURBIDITY BARRIERS

GENERAL DESIGN STANDARDS

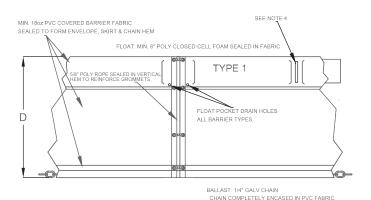

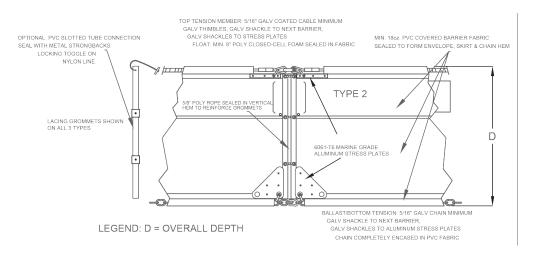

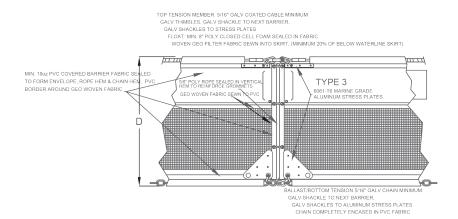

Notes:

- 1. Drawing not to scale
- 2. Barrier must have a minimum 4" freeboard
- 3. Floats, lacing grommet strip and ballast chain sealed in barrier fabric
- 4. Vertical seals between float segments
- 5. Overall depth to be specified by engineer
- 6. Barrier type and depth to be imprinted on float, min. 2 in lettering
- 7. 18 oz. Pvc covered barrier fabric minimum
- 8. Connections by lacing grommets, slotted tube or universal aluminum connector
- Flotation sized for skirt depth/weight


SOLD ONLY BY AER-FLO DISTRIBUTORS

PH: 941.747.4151 | AerFloEnv.com

TURBIDITY BARRIERS


GENERAL DESIGN STANDARDS (continued)



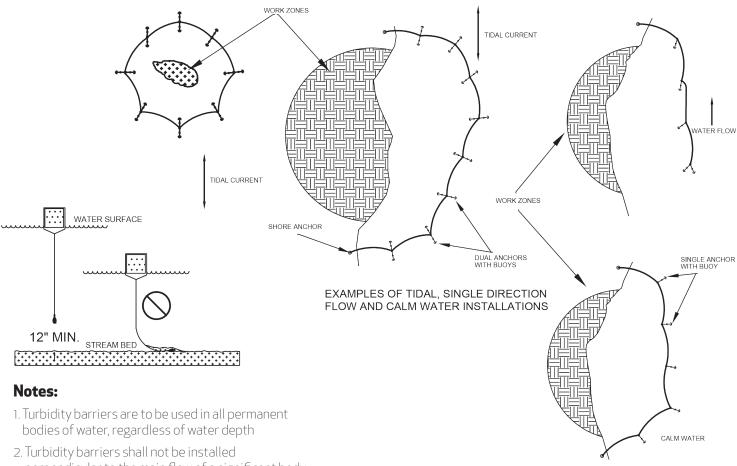

- Turbidity barriers shall not be installed perpendicular to the main flow of a significant body of moving water
- 3. In areas of tidal flow, place buoyed anchors on opposite sides of the barrier to prevent barrier from overriding anchor on tide change
- 4. Do not anchor from bottom hem
- 5. Barrier must maintain a minimum 4 inch freeboard
- 6. Anchor spacing normally 100 ft, may need 50 ft spacing or larger anchors in areas of higher current
- 7. Shore anchors shall be of sufficient size, with deadman, if needed
- 8. Keep chain hem minimum 1 ft off bottom at low tide
- 9. Design of barrier and anchor systems shall be in accordance with manufacturer's specifications
- 10. Lighted buoys shall be used to meet regulatory standards

ANCHOR SYSTEM

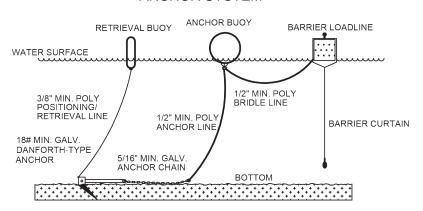

PH: 941.747.4151 | AerFloEnv.com